




Damaged area ground out ready to be furnace brazed.






Furnace brazing requires 1,000 degrees pre heat and then a slow cool down period.

Furnace brazing completed and
slow cooling.

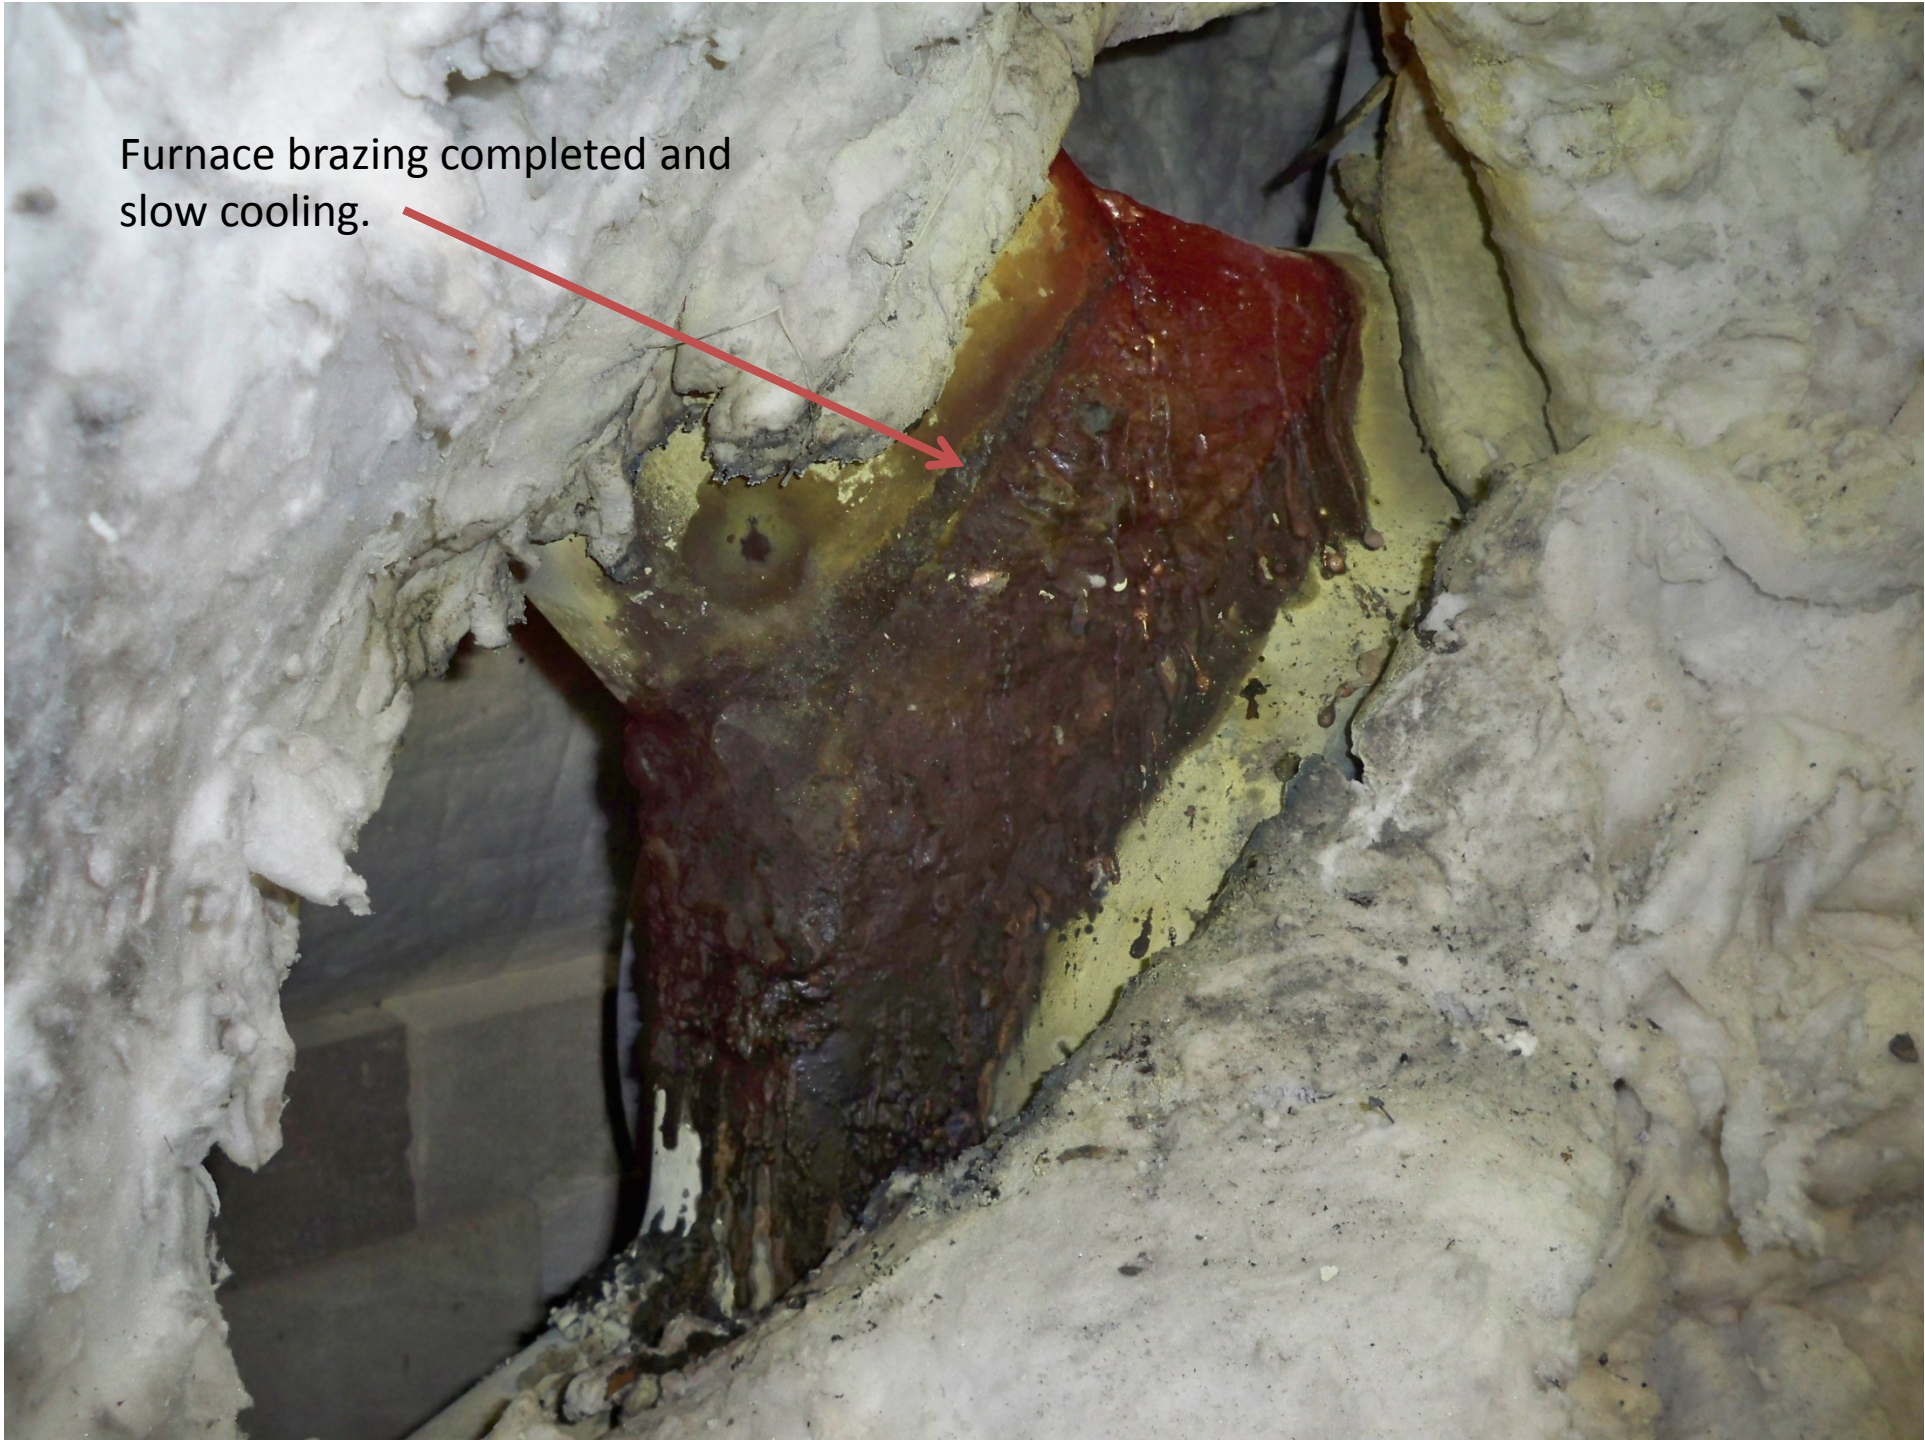

Ready to hand finish

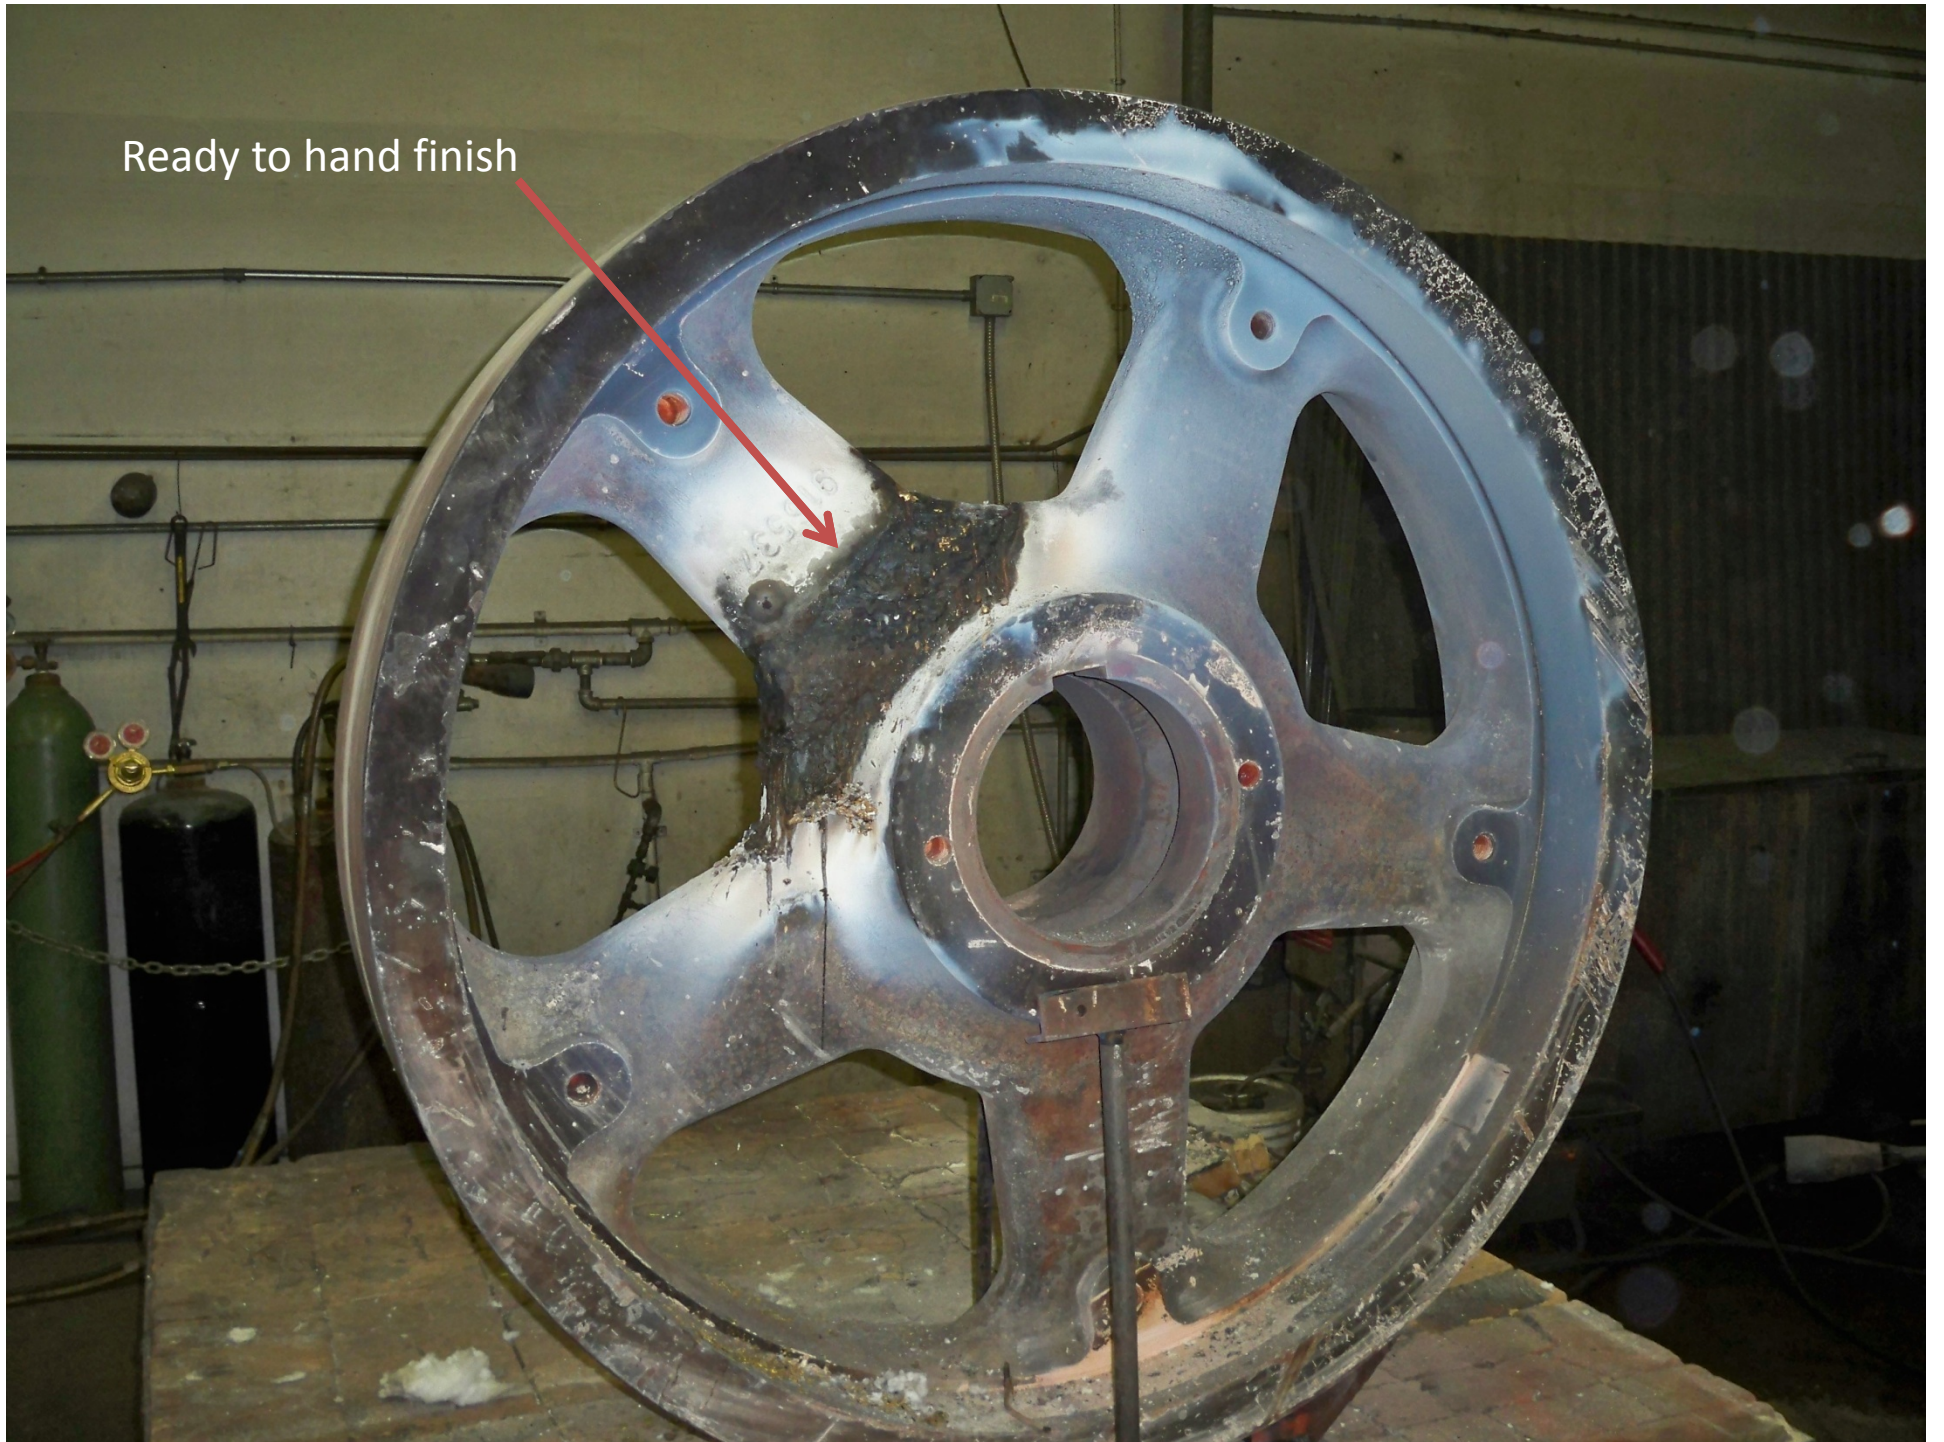

Hand finished and ready to be painted



